1 Door Bar Fridge

User Manual

BC-130-SS / BC-130-SS-DX

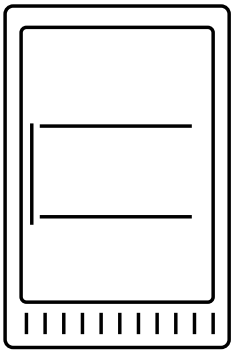

P : 03 9783 6325

E : sales@borrelli.com.au

www.borrelli.com.au

15 OCTOBER 2026 / REVISION 1

Contents

01 Warnings and Safety

02 Installation

03 Cleaning

04 How to Use

05 Tips and Tricks

06 Before Requesting Service

Please read this manual before operating the appliance. Keep it available for future reference.

Applies only to BC-130-SS and BC-130-SS-DX. The BC-130 and BC-130B use a separate manual.

Warnings and Safety

> **!** **Flammable refrigerant**
> This appliance contains R600a flammable refrigerant. Do not damage the refrigerant circuit. Keep ignition sources away. If a leak is suspected, ventilate the area and contact Borrelli or a qualified repair agent.

• Keep all ventilation openings clear during operation. Do not use mechanical devices or other means to accelerate defrosting.

• Do not use electrical appliances inside the storage compartment.

• Use a dedicated wall outlet. Disconnect the power supply before cleaning, maintenance or replacing parts.

• Do not damage, modify or excessively bend the power cord. A damaged cord must be replaced by a qualified technician.

• LED replacement, repairs, disassembly and modifications must be performed by a qualified person.

• Do not store explosive substances, including aerosol cans with flammable propellant. Do not use flammable sprays or substances near the appliance.

• This fridge is intended for storage and display of beverages. Do not use it for other purposes.

• Do not insert fingers, sticks or other objects into the cold-air suction outlet.

• Do not place heavy objects or containers of liquid on top of the unit.

• Dispose of the appliance through an authorised waste centre. Do not expose it to flames.

> **!** **Shelf load limit**
> Maximum load: 25 kg per shelf. Do not exceed this limit or throw items onto shelves.

The supplied manual states an expected operating noise level of up to 55 dB.

Installation

Before use

1. Remove transport packaging and leave the door open to ventilate.

2. Clean the appliance before use.

3. Run the unit for one hour to cool the compartment before loading beverages.

Position and operating environment

• Install on a flat, stable surface that can safely support the loaded appliance.

• Keep out of direct sunlight, rain and weather. Use a temperature-controlled indoor environment.

• Do not install where the ambient temperature exceeds 32 degrees C.

> **!** **Ventilation clearance**
> Allow 20 mm at the sides and above the appliance, and 100 mm at the rear. Keep ventilation openings clear.

Cleaning

> **!** **Disconnect first**
> Disconnect the power cord from the wall outlet before cleaning.

Exterior and interior

• Use a dry cloth to remove dust from inside and outside the cabinet.

• For a deeper clean, use an appropriate detergent and a soft cloth.

• Do not use polishing powder, soap powder, benzine, oil or hot water. These can damage paint and plastic parts.

> **!** **Do not wash the appliance with water**
> Do not splash water directly onto the unit or hose it down. This can cause a short circuit or electric shock.

How to Use

These instructions apply to BC-130-SS and BC-130-SS-DX. Use the SET, arrow and snowflake buttons on the fitted controller.

Change the set temperature

1. Press and hold SET until the temperature setting flashes (approximately two seconds), then release.

2. Use the arrow buttons to adjust the setting. The supplied manual recommends 2.5 to 3 degrees C.

3. Press SET to save.

4. The controller returns to displaying the current cabinet temperature.

Change the temperature differential

The supplied manual calls this the variance setting (rd). It is separate from the desired cabinet temperature.

1. Hold SET until P5 flashes (approximately seven seconds), then release.

2. Press DOWN once to select rd, then press SET to view the flashing value.

3. Use the arrow buttons to adjust the value. The supplied manual recommends 3 to 5 degrees C. Press SET to save.

4. When rd flashes again, hold SET for approximately five seconds to return to the main display.

Manual defrost

1. Hold the snowflake button for approximately three seconds, then release.

2. The snowflake indicator illuminates when defrost begins.

3. The indicator switches off automatically when defrost is complete.

> **!** **Restart delay**
> Wait five minutes after switching the unit off before restarting it.

Tips and Tricks

Transportation

• The supplied manual permits transport on the back for short periods.

• After transport, leave the unit standing upright for 12 hours before switching on.

• Protect the power cord during transportation.

Drain tray

Defrost is automatic. Water collects in the drain tray and evaporates automatically.

Shelves and airflow

• Adjust shelves to suit the items stored. Maximum load is 25 kg per shelf.

• Do not obstruct the fan with stock. Keep the air inlet and suction outlet clear.

Condensation

Condensation can occur in humid conditions. Wipe it away with a damp cloth. The supplied manual describes this as normal rather than a defect.

Ambient temperature

Follow the 32 degrees C installation limit in this manual. The source also quotes 32 degrees C +/- 2 degrees C for several climate classes; this is not used here to raise the installation limit.

Before Requesting Service

Problem	Checks
No refrigeration	Is the power supply interrupted? Is the power cord connected securely? Has a fuse blown or a circuit breaker tripped?
Inadequate refrigeration	Is the temperature setting appropriate? Are the air inlet or suction outlet obstructed? Is stock packed too tightly? Is the door opened frequently or left ajar?
Excessive noise	Are all feet firmly on the floor? Is the back touching a wall or another object? Are objects resting against the back?

Enquiries

If the problem continues, contact Borrelli. Have the model and serial number ready.
Phone: 03 9783 6325
Email: sales@borrelli.com.au
Website: www.borrelli.com.au